


# KONAMI®

2 Player  
3 Player  
4 Player  
Dip Switch  
Setable

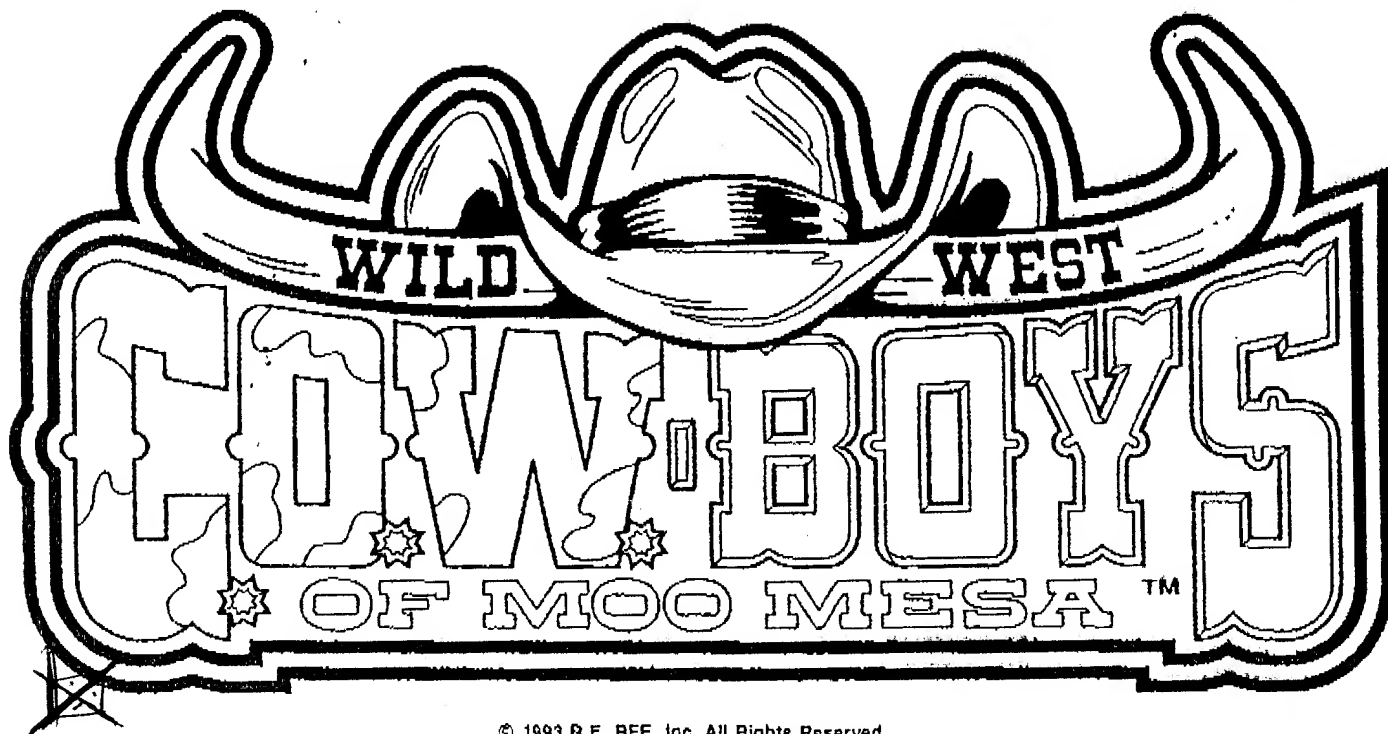

© 1993 R.E. BEE, Inc. All Rights Reserved.  
Exclusively licensed by Surge West, Inc.

The "WILD WEST C.O.W.-BOYS OF MOO MESA," its characters, names  
and all other elements are trademarks of R.E. BEE, Inc.  
Exclusively licensed by Surge West, Inc.

© Konami Inc. 1993 Konami® is a trademark of Konami Co., Ltd.

Service & Parts #

## 708-215-5100

Jerry Korbecki Ext. 122  
George Limonez Ext. 123

# INSTRUCTION MANUAL

KONAMI® is a trademark of Konami Industry Co., Ltd.

# **COWBOY MOO MESA™: SUB HARNESS FOR 3 & 4 PLAYERS**

**CN3  
3P  
CONTROLS**

1	Coin 3
2	Empty
3	3P Left
4	3P Right
5	3P Up
6	3P Down
7	3P Shoot
8	3P Jump
9	Empty
10	3P Start *
11	Empty
12	Empty
13	Empty
14	Empty
15	Ground

**CN4  
4P  
CONTROLS**

1	Coin 4
2	Empty
3	4P Left
4	4P Right
5	4P Up
6	4P Down
7	4P Shoot
8	4P Jump
9	Empty
10	4P Start *
11	Empty
12	Empty
13	Empty
14	Empty
15	Ground

# COWBOY MOO MESA™: WIRING HARNESS

Solder Side ← → Parts Side

GND	A	1	GND
GND	B	2	GND
+5V DC	C	3	+5V DC
+5V DC	D	4	+5V DC
NOT USED	E	5	NOT USED
+12V DC	F	6	+12V DC
*KEY	H	7	*KEY
(EMPTY)	J	8	COIN COUNTER
(EMPTY)	K	9	(EMPTY)
(EMPTY)	L	10	(EMPTY)
(EMPTY)	M	11	(EMPTY)
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
(EMPTY)	R	14	VIDEO GROUND
(EMPTY)	S	15	TEST
COIN 2	T	16	COIN 1
*2P START	U	17	1P START *
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOOT	Z	22	1P SHOOT
2P JUMP	a	23	1P JUMP
NOT USED	b	24	NOT USED
NOT USED	c	25	NOT USED
NOT USED	d	26	NOT USED
GND	e	27	GND
GND	f	28	GND

\* START BUTTONS ARE NOT USED WHEN DIP SWITCHES ARE SET TO INDEPENDENT COIN SETTINGS (SEE DIP SWITCH SETTINGS)

# **COWBOY MOO MESA™: TECHNICAL INFORMATION (cont.)**

HORSESHOE... You can use a flying horseshoe during a certain time to defeat enemy.

BONUS... You can get extra points.

- When you are captured by bovine ghosts in Stage 4, wiggle the Joystick to escape from their attack.
- You can swim up a waterfall in Stage 3 by pressing A and B buttons simultaneously.
- In Stage 2 and 6, you can shoot in 8 directions, jumping-kick by pressing B Button and charge by pressing A and B Buttons simultaneously.
- Your energy units shown on the life gauge is consumed one by one when you are damaged by enemy. When your energy is used up, you lose one life. The game is over when you have lost all the lives.
- There are 7 stages in all. When you defeat the boss enemy in each stage, you can move to the next stage. Continuation feature is available as many times as you want.

## **SELF TEST**

Normal: "OK" will be displayed. Then the game will start.

Abnormal: "BAD" will be displayed and self test will repeat. If "N2 BAD" is displayed, switch off and switch on again with TEST SWITCH (on the PCB) pressed.

## **MANUAL TEST**

### **(1) HOW TO START**

After switching on the power, press the TEST SWITCH on the PCB or on the cabinet, and you will get the MAIN MENU of the Manual Test mode.

NOTE: Switching on with TEST SWITCH pressed causes the program in the EEPROM to be initialized to default.

### **(2) HOW TO RETURN TO THE GAME MODE**

Select "GAME MODE" on the MAIN MENU then press player 1 SHOT BUTTON to return to the game mode.

### **(3) ITEMS AND HOW TO SELECT**

Use player 1 Joystick to move arrow to desired test and press player 1 SHOT BUTTON to initiate testing. Press player 1 SHOT BUTTON during or at the end of each test to return to the MAIN MENU.

MAIN MENU	
1. I/O CHECK	
2. SCREEN CHECK	
3. COLOR CHECK	
4. SOUND CHECK	
5. MASK ROM CHECK	
6. GAME OPTIONS	
7. COIN OPTIONS	
8. DIP SWITCH SETTINGS	
0. GAME MODE	
1 UP'S JOYSTICK = SELECT ITEM	
1 UP'S SHOT = DO CHECK	

### **(4) EXPLANATION OF THE ITEMS**

#### **1. I/O CHECK**

Check all the Joystick and Buttons to see "1" when switched on. Press player 1 and 2 SHOT BUTTONS at the same time to return to MAIN MENU.

#### **2. SCREEN CHECK**

Adjust focus, alignment, size, etc. using the cross-hatch screen.

#### **3. COLOR CHECK**

Adjust color brightness so that the specified area will be colorless.

# COWBOY MOO MESA™: TECHNICAL INFORMATION (cont.)

## 4. SOUND CHECK

When "SOUND SCALE CHECK" is selected, a music scale sounds. At "SOUND CODE," push player 1 Joystick right/left to change sound code.

## 5. MASK ROM CHECK

Roms will be checked one after another, and the message "OK" or "BAD" will be displayed on the screen.

## 6. GAME OPTIONS

Following screen will appear. Use player 1 Joystick up/down to select the utility and move Joystick right/left to modify setting. Factory settings are shown in green, and modified results in red. (Settings below are not always the factory settings.) After modification is completed, select "SAVE AND EXIT" and press player 1 SHOT (or START) Button to save and return to MAIN MENU.

GAME OPTIONS	
PLAYER'S LIFE	1 CREDIT 2 LIVES
DIFFICULTY LEVEL	4/MEDIUM
STAGE SELECTION	AVAILABLE
SOUND IN ATTRACT MODE	ALL THE TIME
VIDEO SCREEN FLIP	NORMAL
SOUND VOLUME	30 MIN-----MAX
LOOP SETTING	GAME OVER AFTER SECOND ROUND
FACTORY SETTINGS	
SAVE AND EXIT	
EXIT	
1 UP'S UP/DOWN=SELECT OPTION	
1 UP'S LEFT/RIGHT=MODIFY SETTINGS	

...Select from 1 to 5 lives.  
 ...Select out of 8 levels.  
 ...Stage selection are available except for Stage 1 & 7.  
 ...Select out of the following 5 types: "ALL THE TIME,"  
 "COMPLETELY OFF" or "ONCE EVERY 2, 4, 8 CYCLES"

... "NORMAL" or "UPSIDE DOWN"  
 ...Sound volume adjustment (1-60)  
 ...Select out of the following 3 types: "GAME OVER AFTER  
 SECOND ROUND," "GAME OVER AFTER FINAL STAGE"  
 or "ENDLESS"

...Returned to Factory Settings

\*If you select "EXIT" instead of "SAVE AND EXIT" after modifying some settings, the message appears: "YOU DID NOT SAVE. DO YOU WANT TO SAVE? YES/NO." When you choose "YES," the screen shows "NOW SAVING" and returns to MAIN MENU. If you select "NO," "NO MODIFICATION" is shown and then MAIN MENU appears.

## (7) COIN OPTIONS

1. When the COIN MECHANISM is set at "COMMON" on the DIP SWITCH on the PCB (SW2 is "OFF"), the screen shows the following options and the coins setting in this case must be done for each coin slot.

COIN OPTIONS (TYPE: COMMON)	
FREE PLAY	NO
COIN SLOT 1	1 COIN 1 CREDIT
COIN SLOT 2	1 COIN 1 CREDIT
FACTORY SETTINGS	
SAVE AND EXIT	
EXIT	
1 UP'S UP/DOWN=SELECT OPTION	
1 UP'S LEFT/RIGHT=MODIFY SETTINGS	

...Choice of Free Play (YES/NO)

} Not to be shown when YES is chosen

} Same as "GAME OPTIONS"

# **COWBOY MOO MESA™: TECHNICAL INFORMATION (cont.)**

2. When the COIN MECHANISM is set at "INDEPENDENT" on the DIP SWITCH on the PCB (SW2 is "ON"), the left coin slot will be for player 1, the right one for player 2. On this setting, "PREMIUM START" setting is available; you can set the play fee for starting higher than the play fee for continuation (e.g., 2 coins start and 1 coin continue).

COIN OPTIONS. (TYPE: INDEPENDENT)	
PREMIUM START	NO
STARTING	
&	1 COIN 1 CREDIT
CONTINUATION	
FACTORY SETTINGS	
SAVE AND EXIT	
EXIT	
1 UP'S UP/DOWN=SELECT OPTION	
1 UP'S LEFT/RIGHT=MODIFY SETTINGS	

... "NO" or "YES 1" to "YES 5"

Same as "GAME OPTIONS"

When you want "PREMIUM START" setting, choose the number of extra coins necessary for starting, then decide the coin setting for continuation. The number of coins for starting will be the sum of both numbers. If you do not set premium start, the number of coins necessary for starting and continuation will be the same.

## **\*COIN SETTING OPTIONS**

COIN(S)	1	1	1	1	1	1	1	2	2	2	3	3	3	4	4	4
CREDIT(S)	1	2	3	4	5	6	7	1	3	5	1	2	4	1	3	5

## **(8) DIP SWITCH SETTINGS**

The present settings will be shown on the screen. To modify settings, turn ON/OFF the actual DIP switches on the PCB. After modifying the settings, press player 1 SHOT to return to the MAIN MENU and then select "GAME MODE" to start the game on the revised settings.

### **EXAMPLE**

DIP SWITCH SETTINGS			
	ON	TO MODIFY SETTINGS,	
	OFF	OPERATE THE RELEVANT	
1 2 3 4		DIP SWITCH ON THE PCB.	
SW1	SOUND OUTPUT	STEREO	
SW2	COIN MECHANISM	INDEPENDENT	
SW3 & SW4	NUMBER OF PLAYERS	4 PLAYERS	
1 UP'S SHOT1	=EXIT		

# COWBOY MOO MESA™: TECHNICAL INFORMATION

## TECHNICAL INFORMATION

- (1) Required power capacity  
GND-Vcc 5V 4A or more  
GND-(+12V)  
\*See the Wiring Diagrams.
- (2) Output  
R (red) analog, positive  
G (green) analog, positive  
B (blue) analog, positive  
SYNC. H-V complexed, negative
- (3) The monitor should be horizontally installed.
- (4) There is no sound volume knob on the PCB. Sound level should be adjusted on the "GAME OPTIONS" in the Manual Test mode. (See page 6.)
- (5) Handle with care.

## DIP SWITCH SETTINGS AND CABINETS AVAILABLE

This game is equipped with a 4-bit DIP SWITCH on the PCB; Switching between 2/3/4-player and other changes will be done easily with these DIP switches.

CONTENTS	DIP SWITCH		
SOUND OUTPUT	SW1 OFF ON		MONAURAL STEREO
COIN MECHANISM	SW2 OFF ON		COMMON *INDEPENDENT
NUMBER OF PLAYERS	SW3 OFF OFF ON ON	SW4 OFF ON OFF ON	2-Player 3-Player 4-Player not used

EXAMPLE: If you are using a 4-player upright with a "multi coin mechanism," set SW2 at "ON" (coin mechanism should be "INDEPENDENT"), set SW3 at "ON" and set SW4 at "OFF". If your cabinet does not have a multi coin mechanism and has only one or two coin slots, set SW2 at "OFF" (coin mechanism should be "COMMON"). In the latter case, four Start Buttons must be equipped.

- NOTE:
- 1) A single control upright or a cocktail table type cabinet cannot be used for this game.
  - 2) On the STEREO cabinet, set SW1 at "ON" so that you can get better music and sound effects.
  - 3) Regarding other game options and coin options, refer to "Manual Test" on page 6.

\*INDEPENDENT—meaning each player has its own coin slot.

# **COWBOY MOO MESA™: TECHNICAL INFORMATION (cont.)**

---

 
## **CONTROL PANEL INFORMATION**

---


Use a multi (for 3/4-player) or dual (for 2-player) control panel with an 8-way Joystick and two function buttons for each player.



8-WAY  
JOYSTICK



SHOT  
BUTTON

 

JUMP  
BUTTON

---

## **PLAY INSTRUCTION**

---

### **(STARTING 2-PLAYER GAME)**

- 1 or 2 people can play simultaneously. Second player can join in at any time.
- Choose the character you want to control out of the four individual characters: MOO MONTANA, DAKOTA DUDE, COWLORADO KID and BUFFALO BULL.
- The select screen will appear by depositing coins. Use joystick to select character and press Start Button to decide the one you want and the game will start automatically.

### **(STARTING 3-PLAYER GAME)**

- Up to 3 people can play simultaneously. Any player can join in at any time.
- Choose the character you want to control out of the four individual characters: MOO MONTANA, DAKOTA DUDE, COWLORADO KID and BUFFALO BULL.
- The select screen will appear by depositing coins. Use joystick to select character and press any button to decide the one you want and the game will start automatically.

### **(STARTING 4-PLAYER GAME)**

- Up to 4 people can play simultaneously. Any player can join in at any time.
- Choose the character you want to control out of the four individual characters: MOO MONTANA, DAKOTA DUDE, COWLORADO KID and BUFFALO BULL.
- Deposit coins in the coin slots for your favorite character and press any button to start the game.

### **(HOW TO PLAY)**

- Control your character with the 8-way Joystick, and attack enemy by shooting and stampeding. You can stampede at enemy by pressing SHOT BUTTON and JUMP BUTTON simultaneously.
- The "charges" are available by pressing A and B Buttons simultaneously.
- There are 11 variations of item you can use. "POWER-UP," "MACHINE-GUN," "PUNCH," "TNT," "TOMAHAWK" and "THUNDERBOLT" out of the 11 items can be used by pressing A and B Buttons simultaneously. If you shoot a chicken, you can get one of following 11 items.

POWER-UP... You can power up your shots.

MACHINE-GUN... You can make your shootings like machine-gun.

PUNCH... You can use a flying punch.

TNT... You can use TNT.

TOMAHAWK... You can use a flying tomahawk.

THUNDERBOLT... You can use thunderbolts to defeat all enemy on the screen at once.

1UP... One more Life becomes available.

SALSAPARILLA... You can restore one unit of energy.

SHIELD... You can become invincible during a certain time.